

Important Instructions:

- Switch off and unplug the iron. Drain the water from the water tank.
- To prevent damage to the soleplate of the iron, make sure the worktop surface is non-abrasive.
- Make sure the iron has cooled down before you start disassembly.

Power Cord Replacement:

1. Remove the 10.0 mm screw securing the backplate to the main body with a Phillips #1 screwdriver.
2. Wedge your thumb and fingers at the joint between the backplate and the handle to loosen the snap joints.
3. Pull out the backplate gently to reveal the electric circuit—it will be still be connected to the wires so don't yank it off.
4. For easy removal, pinch the crimp connector between your thumb and forefinger. Apply force to the connector rather than the cable.
5. Slide out the crimp connector attached to the cable.
6. Before reassembly, ensure that the cord does not obstruct the screw slot

