



User manual

This product is only suitable for well insulated spaces or occasional use.

Contents


1	Your 3-in-1: air purifier, fan and heater	2
	Product overview	
	Display overview	3
	Controls overview	
2	Cotting started	5
_	Getting started	
	Installing the filterSetting up the remote control	
	Setting up the remote control	
3	Using the 3-in-1: air purifier, fan and heater	5
	Air quality light	
	Turning on and off	
	Heater and fan	
	Oscillation	
	Setting the timer	
	Setting the child lock	6
	Sleep, turning light on/off	7
	Pairing your remote control	7
	Replacing the battery	7
4	Cleaning and maintenance	Ω
7	Cleaning the body of the appliance	
	Cleaning the filter surface	
	Filter replacement	
	ι περιαζεπιεπ	C
5	Troubleshooting	9

1 Your 3-in-1: air purifier, fan and heater

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


Product overview

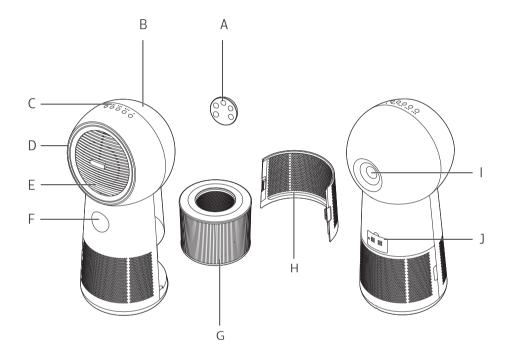

Α	Remote control	F	Display screen
В	Housing	G	Philips filter (FYM220/30)
C	Control buttons	Н	Back cover
D	Light strip	-1	Storage slot for remote control
Е	Air outlet	J	Air quality sensor

2


Display overview

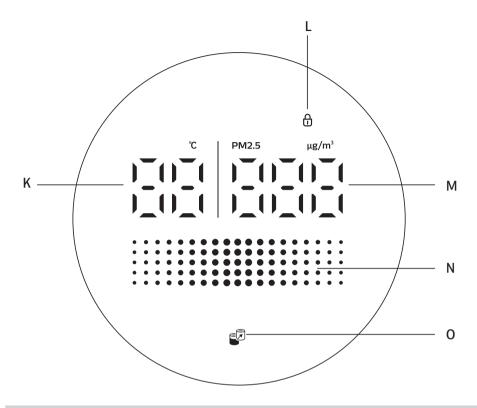

K	Temperature display	N	Air quality indicator
L	Child lock indicator	0	Filter replacement alert
М	PM2.5 display		

Controls overview



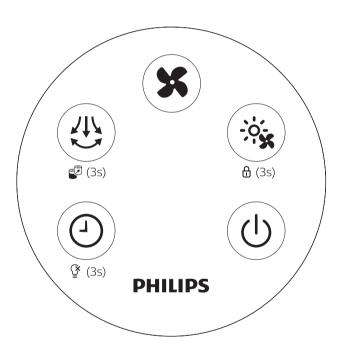


	4	₩.	×	-;\\;\;\;\;\;\;\;\;\;\;\;\;\;\;\;\;\;\;	<u></u>
Short press	Timer	Oscillation	Fan setting	Heater setting	On/off
Press for 3 seconds	Sleep Light on/off	Reset filter lifetime		Child lock	

Getting started

Installing the filter


Note: Make sure the appliance is unplugged from the electrical outlet before installing the filter.

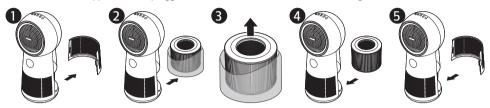

- 1 To remove the back cover, hold the side of it with both hands and pull.
- 2 Pull the filter from the appliance.
- 3 Remove all packaging materials from the filter.
- 4 Put the filter back into the appliance.
- 5 Reattach the back cover

Setting up the remote control

- 1 Pull out the plastic film on the remote control to activate the battery.
- Pair the remote control with the appliance if chapter "Pairing your remote control").

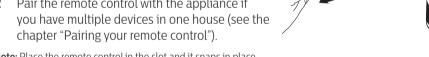

Note: Place the remote control in the slot and it snaps in place automatically.

Using the 3-in-1: air purifier, fan and heater 3


Air quality light

PM2.5 level	Air quality light color	Air quality level
≤ 60	Blue	Good
61-120	Blue-purple	Fair
121-250	Purple-red	Poor
> 250	Red	Very poor

Turning on and off

Note:

- Plug the appliance into the power outlet: do not use a power strip.
- If the appliance is running in heating mode when you turn it off, it continues working for 20 seconds to exhaust the remaining heat. Counting down will show on the display panel.
- 1 Press 1 to switch on the appliance.
- **2** The display panel lights up, and appliance shows the PM2.5 level and temperature.
- 3 Press (1) to switch off the appliance.

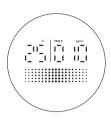

Heater and fan

	~	@	@	Light strip
Heater (🐾)	Low	Medium	High	Red
Fan (💢)	Low	Medium	High	Blue

Oscillation

Press the button, the appliance can oscillate at three angles: 60°, 120° and 350°.

Setting the timer


Press the ① button repeatedly to set operating hours of the appliance. The timer is available from 1 to 7 hours.

1hour	2 hours	3 hours	4 hours	5 hours	6 hours	7 hours
					1h 2h 4h ○ • •	1h 2h 4h

To deactivate the timer, press the ① button repeatedly until all the hour indicators are off.


Setting the child lock

- 1 Press and hold the 🔆 button for 3 seconds to activate the child lock.
 - → fappears on the screen.
 - → All the other buttons are unresponsive except on/off.
- 2 Press and hold the 🔆 button for 3 seconds to deactivate child lock.
 - → disappears.

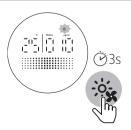


Sleep, turning light on/off

- 1 Press and hold the ① button for 3 seconds.
 - → The display screen dims, rest lights will turn off.
- **2** Press any button to turn all lights on.

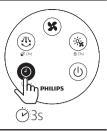


Pairing your remote control

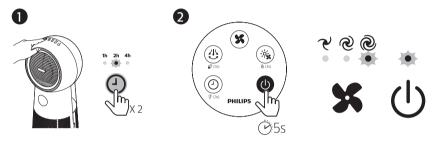

- 1 Unplug the appliance from the power outlet and wait for 10 seconds. Plug in the appliance, then within 5 seconds, press the ② button on the appliance twice.
 - → The 2h indicator lights up.
- 2 Long press the 1 button for 5 seconds on the remote control within 5 seconds.
 - → The 🖒 and @ indicator of fan button on the appliance lights up, and the appliance operates in the fan mode, indicating that the pairing is successful.

Note: If the "2h" indicator is blinking, you must repeat the pairing.

Replacing the battery

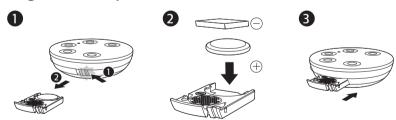

- 1 Push the battery bracket edge gently and pull it out of the remote control.
- 2 Insert the new CR2032 battery with correct polarities as indicated.
- 3 Put the battery bracket back into the remote control.

4 Cleaning and maintenance

Note: Switch off the appliance and unplug it from the power outlet before continuing.

Cleaning the body of the appliance


Use a soft, dry cloth to clean the appliance surface, including air inlet and outlet.

Clean particle sensor surface. Do not open particle sensor cover.



Cleaning the filter surface

Clean the filter surface with a vacuum cleaner or brush every two weeks.

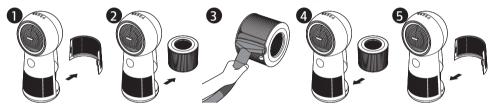

- 1 Pull the back cover and remove it from the appliance.
- 2 Pull the filter from the appliance.
- 3 Clean the surface of the filter with a vacuum cleaner.
- 4 Put the filter back into the appliance.
- **5** Reattach the back cover.
- **6** Wash your hands thoroughly after cleaning the filter.



Filter replacement

When the filter replacement alert lights up

Note:


- The filter is not washable or reusable.
- Do not smell the filter because it contains air pollutants.

Replace the filter when 🗗 lights up on the screen.

- 1 Replace the filter with Philips filter (FYM220/30). Follow the instructions in the chapter "Installing the filter".
- 2 Press \bigcirc to switch on the appliance.



- 3 Press and hold the button for 3 seconds to reset the filter replacement time
 - → The filter replacement alert ② disappears from the screen.
- 4 Wash your hands thoroughly after replacing the filter.

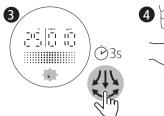




Before the filter replacement alert lights up

You can replace the filter before the filter replacement alert () lights up. If you do this, you need to reset the filter lifetime counter manually.

- 1 Unplug the appliance from the power outlet and wait 10 seconds.
- 2 Plug the appliance into the power outlet.
- 3 Within 15 seconds after power on, press and hold the button for 3 seconds to reset the filter lifetime counter.
 - → The filter replacement alert blinks once after successfully resetting the filter.

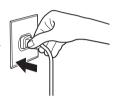

5 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The airflow from the air outlet is significantly weaker than before.	The surface of the filter is dirty. Clean the surface of the filter (see the chapter "Cleaning and maintenance").

Problem	Possible solution
The air quality does not improve even though the appliance has been operating for a long time.	 Check whether the packing material is removed from the filter. Check whether the filter is installed in the appliance. Clean the sensor cover surface with mop or vacuum cleanser; Do not open sensor cover or touch inside. Room size is too large, or the outdoor air quality is poor. For optimum purification performance, close the doors and windows when operating the appliance. There are indoor pollution sources. Examples include cigarette smoke, cooking fumes, incense, perfume and alcohol. Filter has reached end of life. Replace the filter with a new one.
The appliance produces a strange smell.	 The first few times you use the appliance, it may produce a plastic smell. This is normal. If the appliance produces a burning smell, immediately unplug it and turn it upside down to check whether any foreign objects have fallen into the appliance. If nothing is found, please contact your Philips dealer or an authorized Philips service center. The filter may produce an odor after being used for a while because of the absorption of indoor gases. It's recommended that you reactivate the filter by putting it in direct sunlight for repeated use. If the odor remains, replace the filter.
The appliance is too loud.	 The noise level is higher if you select high speed. If anything drops into air outlet, it may also cause abnormal loud sound. Immediate turn off the appliance and turn it upside down to remove foreign objects. If there is an abnormal sound, contact the Consumer Care Center in your country.
The appliance still indicates that I need to replace a filter, but I already did.	• Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then press and hold the 🖰 button for 3 seconds.
The heating function is not working.	 Check whether the air inlet or air outlet is blocked. Check whether the filter surface is excessively dirty and blocking airflow. If so, the heating function may stop working for protection.

Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,1	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P _{min}	1,2	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	P _{max, C}	1,8	kW	electronic heat charge control with room and/or outdoor temperature feedback	[yes]
Auxiliary electricity consumption				fan assisted heat output	[no]
At nominal heat output	elmax	N/A	kW	Type of heat output/room temperature con (select one)	ntrol
At minimum heat output	elmin	N/A	kW	single stage heat output and no room temperature control	[no]
In standby mode	elsB	0	kW	Two or more manualstages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				with electronic room temperature control	[yes]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple selections	possible
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[yes]
				with black bulb sensor	[no]



 $\ensuremath{\mathbb{O}}$ 2021 Philips Domestic Appliances Holding B.V. All rights reserved.

